

## **Quick guide NorsupOne V2**

Connect all the hardware

For the connection in the heatpump.

485A+ (heatpump) to 23 in V2 box

485B- (heatpump) to 25 V2 box



For the SG-ready heatpumps and P13 and P17 horizontal you can use a two core wire (max 0,75mm<sup>2</sup>).For the heatpumps with a small pcb you need cable 7021825 to connect directly on the PCB. Only the black and blue are used(It is ok to cut off the green and brow, but be sure they don't touch each other).

